



- Removal

⚠ CAUTION


- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.

NOTICE


- Take care not to bend or scratch the bumper cover and panels.

Rear Outside Combination Lamp

1. Disconnect the negative (-) battery terminal.
2. Loosen the mounting bolts then remove the outside rear combination lamp (A).

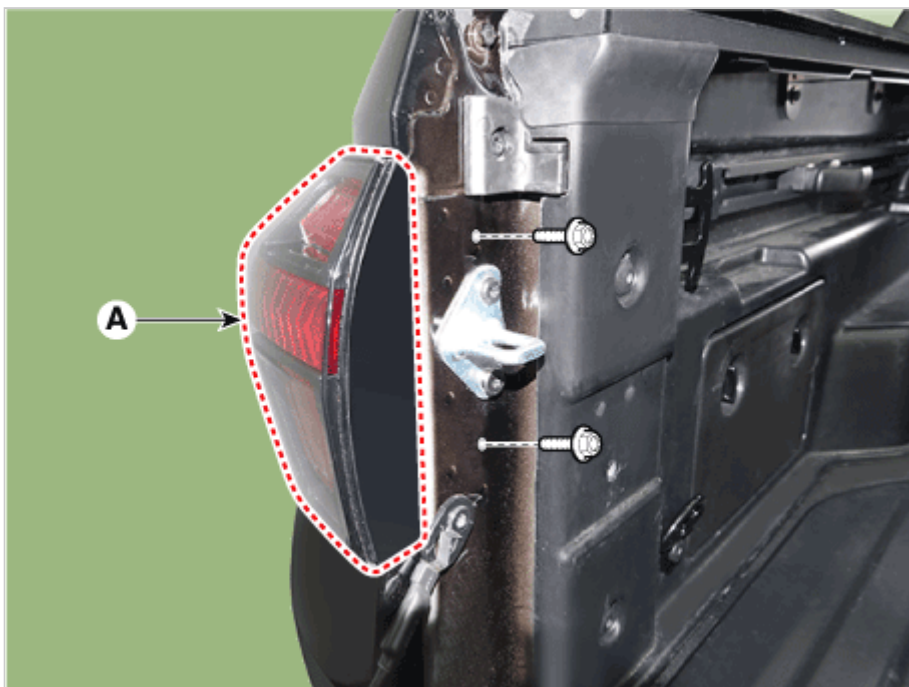


3. Disconnect the rear combination lamp connector (A).

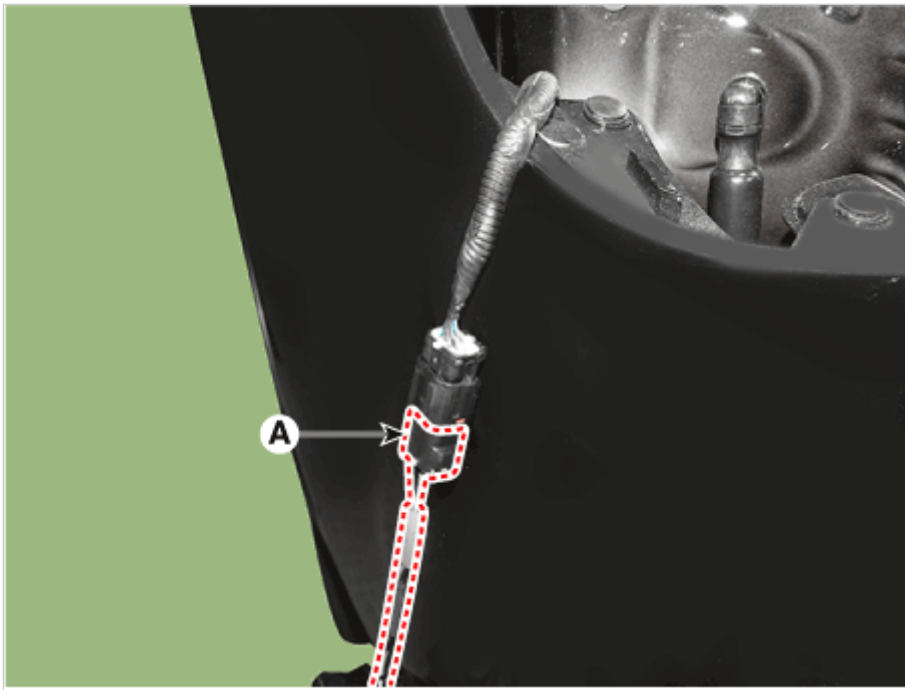

Rear Inside Combination Lamp

1. Disconnect the negative (-) battery terminal.
2. Remove the liftgate trim.
(Refer to Body - "Liftgate Trim")
3. Disconnect the rear inside combination lamp connector (A).

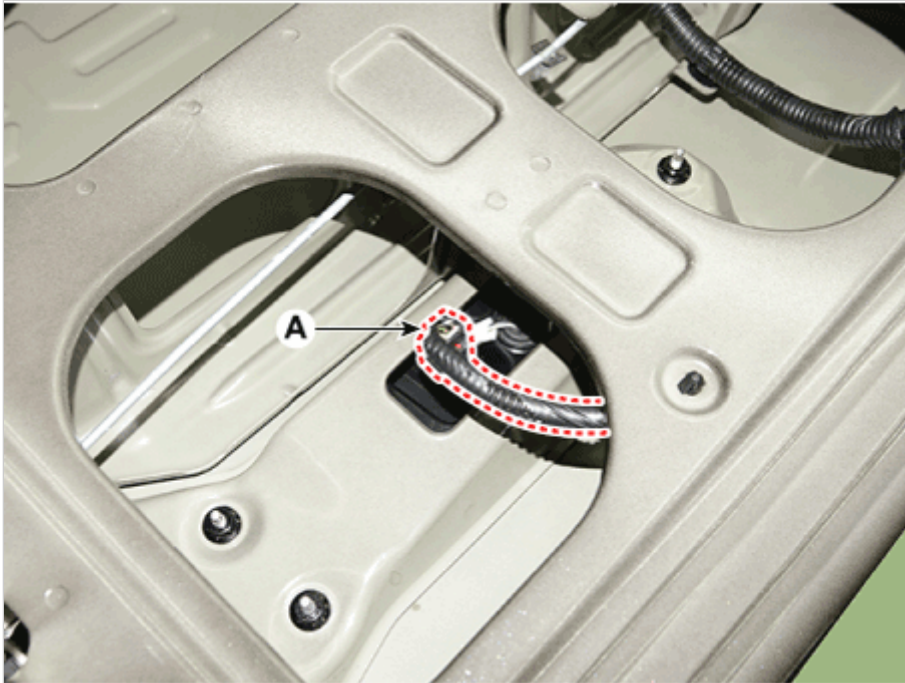

4. Loosen the mounting nuts and remove the rear inside combination lamp (A).



- Installation

Rear Outside Combination Lamp

1. Connect the rear outside combination lamp connector.
2. Install the rear outside combination lamp.
3. Connect the negative (-) battery terminal.

Rear Inside Combination Lamp


1. Connect the rear inside combination lamp connector.
2. Install the rear inside combination lamp.
3. Install the liftgate trim.
4. Connect the negative (-) battery terminal.

- Replacement

Stop & Turn signal lamp bulb

1. Remove the rear outside combination lamp.
2. Remove the stop & turn signal lamp bulb after turning it in the counter clock-wise direction.

[Upper]

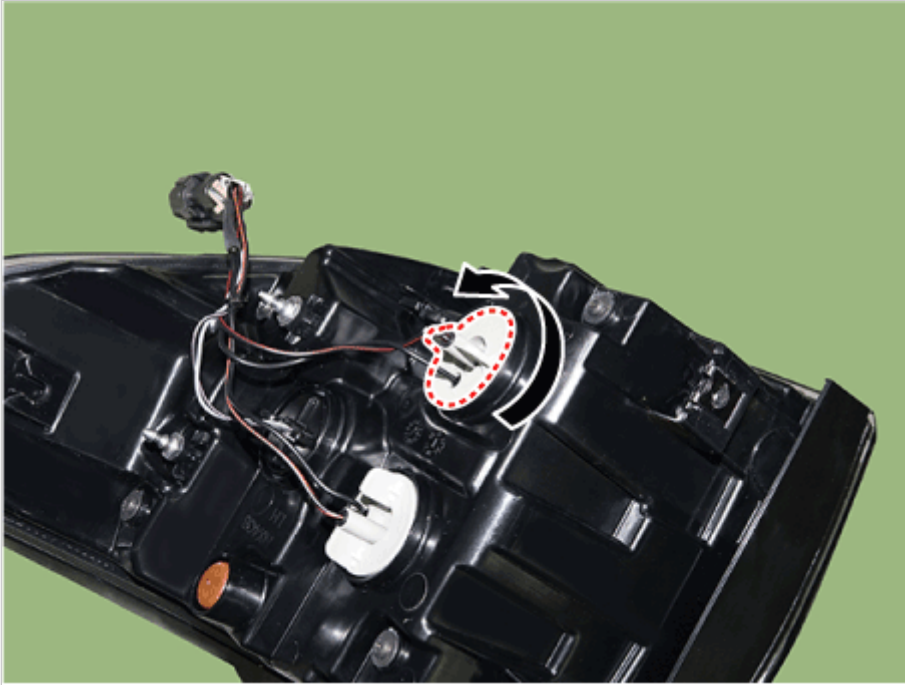


[Lower]




3. Replace the stop & turn signal lamp bulb (A).

[Upper]

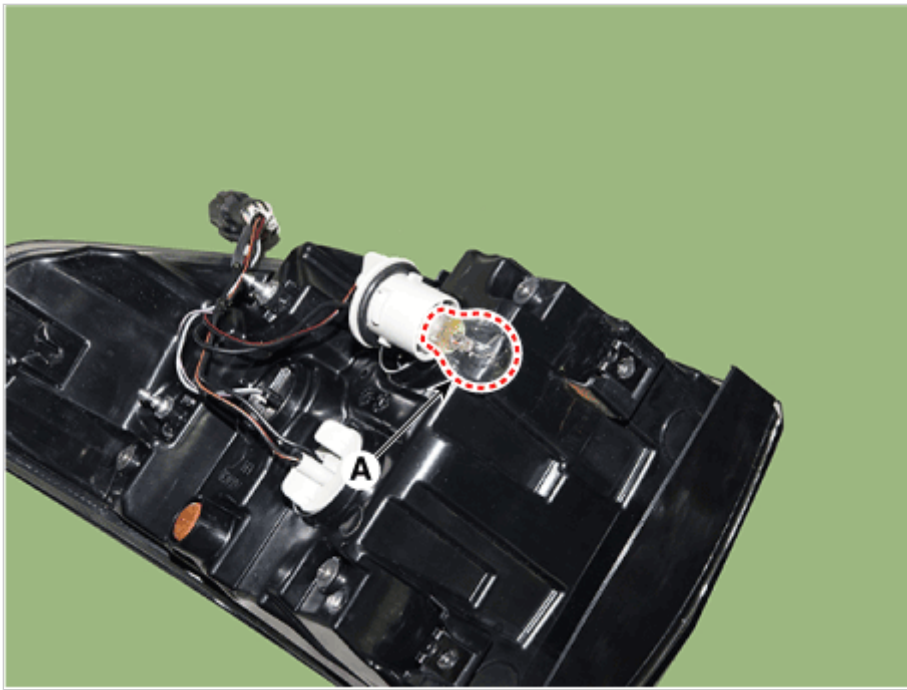

[Lower]

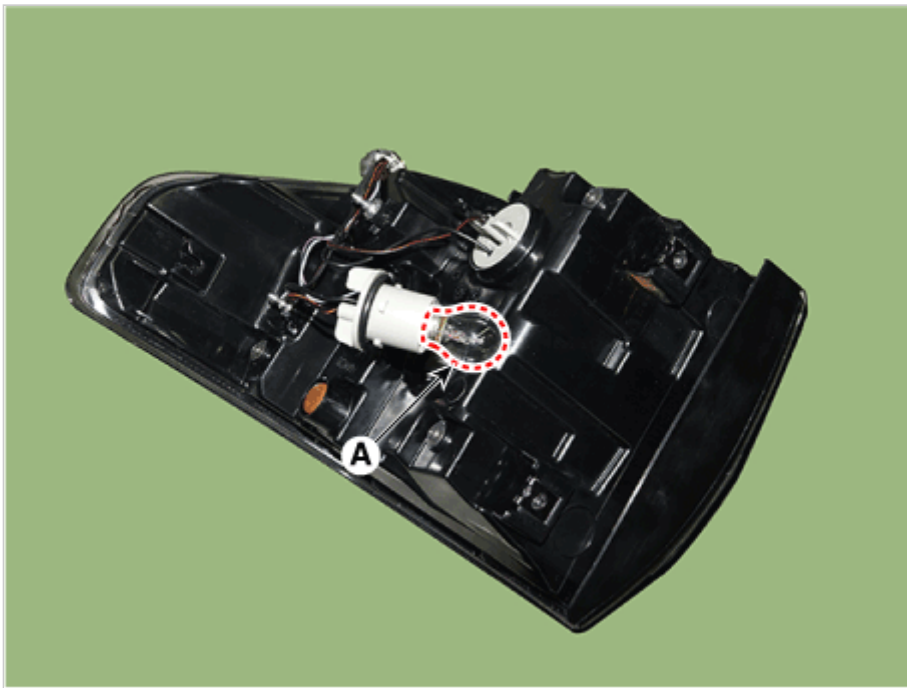

4. To install, reverse removal procedure.